

TÉLÉPHONE À GRANDES TOUCHES

mode d'emploi

Touche SOS rouge à l'arrière

appuyer sur le bouton en situation d'urgence : le téléphone émet un son puissant, appelle les numéros enregistrés ou envoi des SMS

Enregistrement des numéros d'urgence

Sélectionner 'répertoire téléphonique' dans le menu principal (touche flèche haut); sélectionner 'numéros extra', puis 'ajouter'. Entrer les numéros de téléphone dans l'ordre souhaité d'appel. Jusqu'à 4 numéros peuvent être programmés. Le téléphone composera successivement les 4 numéros jusqu'à obtention d'une réponse.

Envoi de messages (SMS) d'urgence

dans le menu principal, sélectionner 'messages' puis 'emergency SMS'. Taper le message d'urgence qui sera envoyé sur les 4 numéros.

changer la sonnerie

dans le menu principal, choisir 'paramètres' puis 'réglages téléphone', puis 'profils d'utilisateurs', 'général', 'personnaliser', 'paramétrage sonnerie', 'appel entrant' et sélectionner dans la liste qui apparaît. presser le bouton vert pour confirmer votre choix.

Ajouter un contact

sélectionner répertoire dans le menu principal puis 'ajouter nouveau contact' puis appuyer sur la touche verte. Apparaît alors : 'Nom' et <vider>; Appuyer sur la touche verte et saisir le nom. valider touche verte. puis flèche bas; touche verte et rentrer le numéro de téléphone; on peut aussi créer des groupes, saisir un email, un deuxième numéro (bureau).

Régler une alarme (réveil) dans le menu principal, choisir 'paramètres' puis 'alarme'. régler l'heure d'alarme. puis changer 'désactiver' en 'une fois' ou 'quotidien' pour activer l'alarme une fois ou tous les jours. 3 alarmes différentes peuvent être paramétrées.

Insérer la carte SIM



Touches sur les côtés

du côté de la touche verte

en haut : touches + et - pour augmentent ou diminuer le volume

en bas : allumage/extinction de la radio. Une fois la radio allumée, régler la fréquence FM avec les touches flèches. Poser le téléphone pour une meilleure qualité d'écoute.

du côté de la touche rouge

en haut : allumage/extinction de la torche.

en bas : blocage/déblocage des touches pour éviter de fausses manipulations dans un sac. Même en position bloquée, on peut répondre à un appel entrant en appuyant sur la touche verte.

Touche SOS rouge à l'arrière

appuyer sur le bouton en situation d'urgence : le téléphone émet un son puissant, appelle les numéros enregistrés ou envoi des SMS

Touches et fonctions

• Touche verte

Dans le menu principal : affiche les appels récents
Dans les menus, sert de touche OK
Répondre aux appels

• Touche rouge

Appui long : allume/éteint le téléphone
Dans les menus, permet de sortir des menus
Pour terminer un appel

• Touche Flèches

Permet de se déplacer dans les menus
en dehors des menus : touche haut : accès aux menus
touche bas : accès au répertoire

• Touches numériques

Les touches numériques peuvent mémoriser des numéros de téléphone
Pour ajouter un contact à une touche :
Maintenir la touche désirée pendant 2 secondes : 'Régler numéro' apparaît. Appuyer sur le bouton vert pour choisir un contact. Les contacts doivent déjà être dans le répertoire (voir 'ajouter un contact')
Pour effacer un numéro abrégé
appui long sur # ou * : avec les fleches naviguer vers le numéro que l'on désire supprimer. appuyer sur la touche verte et choisir avec les fleches supprimer. valider avec la touche verte. sortir des menus avec la touche rouge.

• Touche numéro 1


utiliser la touche 1 pour la ponctuation dans les messages.

Touche numéro 0

quand vous êtes au téléphone, appuyez sur la touche 0 pour activer/désactiver le haut-parleur. Le volume du haut-parleur peut être réglé avec les touches volume sur le côté de la touche verte.

Insert/Remove SIM Card

1. Remove battery cover and then remove the battery.
 - ❖ Insert: Insert the SIM card into the SIM card slot as indicated below.

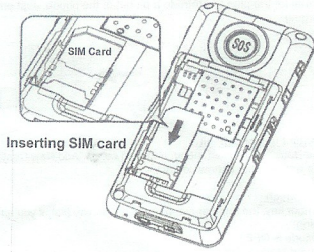

Inserting SIM card

- ❖ Remove: Remove the SIM card by slightly lifting up the corner of the SIM card then pulling it out, as indicated below.



SIM Card

1

Remark: The contact points and SIM card may easily be damaged if carelessly removed and inserted. Please be careful when removing/inserting the SIM card.


Battery Charging

You are able to charge the mobile phone when it is powered ON/OFF.

Note: Make sure the battery is inserted in the phone before charging.

1. Connect the cable of the charger to the phone.

Note: Firmly insert the cable into the phone, however do not forcibly fully insert the plug. It is normal for the plug to protrude a bit out of the phone. Just ensure that the phone is charging.
2. Connect the plug of the charger to the power socket.
3. When charging is complete (indicated by the levels of battery on the mobile phone display), disconnect the cable of the charger from the phone and then proceed to unplug from the power socket.

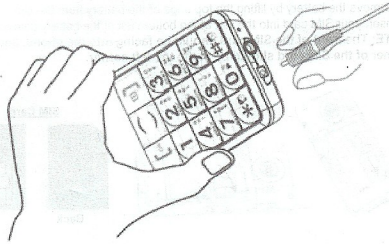

2

Mobile Phone Quick Reference Manual

Key	Functions
 Green Button (top left)	<ul style="list-style-type: none"> ● In Main Menu: Displays recent calls. ● Used as an "OK" button to select menu options. ● Answers and connects incoming calls.
 Red Button (Top Right)	<ul style="list-style-type: none"> ● If Held: Powers phone ON/OFF. ● Backs out of menu options. ● Ends current connected/incoming calls.
 Arrow keys (Top Middle)	<ul style="list-style-type: none"> ● Used for scrolling through menu options. ● When not in Menu: <ul style="list-style-type: none"> Up: Access Main Menu Down: Access Phone Book
Number Keys	Used to input numbers and characters. Keys 2 - 9 and * # can be set as speed dials for quick calling assigned numbers. * # Speed Dial Setting a) To Add New Contact Hold the desired number key and "Set Number" option will be shown. Press Green Button to edit/choose the contact person. The desired contact must already be recorded in your Phonebook in order to be selected. b) To Edit/Delete Key For Speed Dials Select "Settings" under main menu, then scroll to "Call Setup" and choose "Speed Dial" to update a currently assigned number. Select which speed dial key to edit. (e.g. Keys 2-9 and * #)
Number Key "1"	<ul style="list-style-type: none"> ● Used to type punctuation when messaging. ● If Voice Mail number is set, holding this button will connect you to your voice mail.

3

	<ul style="list-style-type: none"> Press the volume key "+" to make the volume of the conversation louder. Press the volume key "-" to make the volume of the conversation softer.
	Slide this button up to enable the radio. Select "Tune the FM Radio" under main menu to tune which channel you wish to listen to. Slide down to disable the radio.
	Slide up to turn on the flashlight. Slide down to turn off the flashlight.
	Slide up to unlock the keypad. Slide down to lock the keypad.
	<p>It can be set in advance up to four emergency calls and text messages.</p> <p>Emergency situations: When the SOS button is pressed, the phone will issue a loud warning sound and automatically send messages to the set phone numbers.</p> <p>Setting Emergency Call Number: Select "Phone Book" under main menu, and then select "SOS Number" to update the emergency call numbers. Enter up to FOUR different contact numbers.</p> <p>Setting Emergency Text Message: Select "Messages" under main menu, and then select "Emergency SMS" to update the emergency text message.</p>
	When you are making a call, you can hold this key to turn ON/OFF hands-free mode. In hands-free mode, you can press the volume keys to change the volume of the sound.


4

Icon Descriptions

	Battery power level indicator
	Reception strength
	Alarm enabled
	Unread messages
	SMS memory full
	Call transfer enabled
	Missed calls
	Sound off
	Roaming
	Keyboard lock
	Headphones connected
	Keypad is locked
	Locked keypad with unread messages
	Locked keypad with missed calls
	Locked keypad with missed calls and unread messages

Setup Your Phone

- Remove the battery cover from the back of the mobile.
 - Remove the battery by lifting the top edge of the battery from the slot.
 - Insert your SIM card into the slot at the bottom left of the battery compartment.
- NOTE: The front of the SIM card should be facing into the phone, and the cut corner of the SIM card should be at the top left corner.**

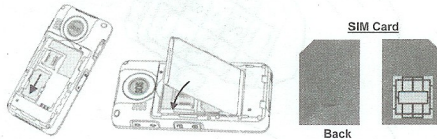


- Insert the battery back into the phone.
- NOTE: The metal receptors at the bottom of the battery pack must be touching the metal plugs at the bottom right inside the battery compartment.**
- Replace the battery cover.

5

Recharging the Battery

Connect the Big Button Mobile to the electrical power outlet with the cable & plug provided.

Note: Firmly insert the cable into the phone, however do not forcibly fully insert the plug. It is normal for the plug to protrude a bit out of the phone. Just ensure that the phone is charging.



Add New Contact to Phonebook

Select "Phone Book" under main menu, and then select "Add New Contact", proceed to input Name and Number of new contact.

Number Key Speech

Press the number key, the number can be read out as you dial, if you have the following setting:

- Silent Mode is OFF
- Key Sound Mode is ON
- Volume Time is ON

Time Speech

Time can be read out for each Hour if you have the following setting:

- Silent Mode is OFF
- Key Sound Mode is ON
- Volume Time is ON

Time and date

Select "Settings" under main menu and then "Phone Setup", here you can set the time and date.

Alarm

Select "Settings" under main menu and then "Alarm", here you can set the Alarm time.

Voice Mail

Select Messages under main menu, then select "Voice Mail" and input the voice mail number. Once it has been set, holding Key 1 will speed dial to your voice mail box.

Change Ring Tone

Select "Settings" under main menu, choose "Phone Setup" and find "User profiles" -->"General"-->"Customise"-->"Tone setup"-->"Incoming call". In the list that appears, choose the tone that you prefer. Once you have selected a desired tone, e.g. MIDI 1, press the Green Button to confirm.

Printed in CHINA

6